



Manual

Version: 1791

Copyright 2007-2010 ImageStream Internet Solutions, Inc., All rights Reserved.

Table of Contents

RichardJune/Manual.....	1
Table of Contents.....	1

RichardJune/Manual

Table of Contents

1. General Information
 1. Introduction and Preparing for Installation
 2. How the Imagestream Router Works
2. System Configuration
 1. Authentication
 1. Setting root password
 2. TACACS configuration
 2. Logging in
 1. Monitor
 2. Console (sconsole)
 3. Modem (sconsole)
 3. Backup/Restore
 4. DNS configuration
 1. Setting the hostname
 2. Setting the domain
 3. Setting the DNS servers
 5. Log Configuration
 1. Local logs
 2. Remote logs
 3. Advanced configuration
 6. Time
 1. Setting the time
 2. Using NTP
 7. User Interface
 1. Setting terminal type
 2. Setting text editor
 3. Command line basics
3. Network Interfaces
 1. Common Configuration
 1. Referencing an interface
 2. Port description
 3. Primary IP Address
 4. Additional IP Addresses
 5. Enabling and Disabling Interfaces
 6. Interface Bandwidth
 2. LAN Interfaces
 3. Synchronous Serial WAN Interfaces
 4. Integrated CSU/DSU WAN Interfaces
 5. ATM Interfaces
 6. Frame-Relay Interfaces
 7. ISDN BRI Interfaces

- 8. Load Balancing and Link Aggregation
 - 1. Bonder
 - 2. Multilink PPP
 - 3. Multilink Frame-Relay
- 4. Network Services
 - 1. DHCP Services
 - 2. Dynamic Routing
 - 1. Quagga
 - 2. GateD
 - 3. SNMP
 - 4. SSH
 - 5. Dialout PPP Menu
 - 6. Traffic Management
 - 1. Quality of Service
 - 7. Security
 - 1. Calea
 - 1. Port Replication
 - 2. Firewall
 - 8. Tunnels and Virtual Private Networks
 - 1. IPSec
 - 2. OpenSSL
 - 3. GRE
- 5. Configuring Rate Limiting Within SAND
- 6. Troubleshooting and Monitoring
 - 1. Validating Link State
 - 2. Interface Statistics (stats)
 - 3. MRTG
- 7. Procedures
 - 1. Product Return
 - 2. Technical Support
- 8. Helpful Tools
- 9. Basic Networking
- 10. Glossary